Hacking into a wheelchair controller

2021-03-15

This project shows how to build a wireless joystick controller for a wheelchair using Arduino and nRF24L01 radio modules. The system intercepts the joystick signals and transmits them wirelessly to the wheelchair's controller, allowing remote operation. The build requires minimal soldering and uses off-the-shelf components, making it accessible for DIY electronics projects. The final result is a compact, battery-powered remote control that can operate the wheelchair from a distance.

blog: Hacking into a wheelchair controller email: quarktetra@gmail.com

Introduction

I wanted to build a heavy-duty bot that I can use for various purposes. I didn't want to reinvent the wheel, and decided to look for a sneaky way of building one. My first idea was to use an old wheelchair base. I was planning to salvage the wheels and the motors only and purchase a motor driver unit. Then I came up with a very sneaky idea. What if I could hack into the joystick controller and use the whole system? This is the story of how I converted an old wheelchair I bought from Craigslist to a remote controlled bot for less than \$10.

Parts

2x Arduino Uno boards 2x nrf24l01 transceivers one joystick, or joystick shield 2x 2.2K resistors 2x 33μ F capacitor.

A quick tour

Browse through the images to see the parts used in the build. It is a set up based on a pair of Arduino Uno and nrf24l01. The idea is to fool the wheelchair controller to think that the signal it is receiving is coming from its own joystick. This won't work for joysticks that use sophisticated digital communication with the controller. It will work for analog joysticks that simply produce two anolog signals to encode the position of the joystick knob.

Figure 1: Arduino Uno and nrf24l01.

The joystick terminals

A resistive joystick encodes the position of its knob using to signals. I first probed the voltages on the four joystick terminals, two of which were simply the power lines (5V and ground). The other two lines encode the position. When the knob is at its center position, both lines showed 2.5V. If I push the knob all the way up(down) the voltage becomes 4V (1V). The same range applies to the other line when the knob is pushed all the way to the right or left. The trick here is to cut the two signal lines, and connect them to the output of Arduino.

Transmitting signals

nrf24l01 with Arduino uno is a great and very cheap method to send signals. We want to have a hand-held unit with a joystick and send the position of the joystick to the receiver. The great thing is that there is a shield for that! There is no soldering involved on the transmitter side, just drop in the shield on top of Uno. Although you won't need to worry about the connections, they are described the code as well. You can find the code in my repository or copy it below.

```
// Visit https://tetraquark.netlify.com/ for more projects
//A simple code to transmit joystick x and y values with Arduino Uno and nrf24101
// get the librarry here: https://github.com/nRF24/RF24
// will work with the "arduino joystick shield with nrf24101"
// NRF Pin
              Arduino Pin
//
     Vcc
                 3.3V
                             DO NOT connect to 5V, it will damage the transmittet unit!
//
     CS
                 10
//
     MOSI
                 11
//
     GND
                 GND
//
                   9
     CE
//
     CSN
                   10
//
     SCK
                 13
//
     MISO
                 12
```

```
// Note that CE and CS pins can be changed, if needed.
#include <SPI.h>
#include <nRF24L01.h>
#include <RF24.h>
#define CE_PIN 9 // these are the default connections for the joystick shield
#define CSN_PIN 10 // these are the default connections for the joystick shield
#define JOYSTICK_X AO /// Connect Joystick output 1 to AO
#define JOYSTICK_Y A1
                          /// Connect Joystick output 1 to A1
const uint64_t pipe = 0xE8E8F0F0E1LL;
RF24 radio(CE_PIN, CSN_PIN);
int joystick[2];// this will store x and y components
void setup()
    {
        Serial.begin(9600);
        radio.begin();
        radio.openWritingPipe(pipe);
void loop()
    {
        joystick[0] = analogRead(JOYSTICK_X); joystick[1] = analogRead(JOYSTICK_Y); // reading
        radio.write( joystick, sizeof(joystick) );// transmitting the data
        Serial.print("Sending: X="); Serial.print(joystick[0]); Serial.print("; Y="); Serial
    }
```

If you do not have the joystick module, you can create your own with the following connections:

NRF

Arduino

Vcc

3.3V*

CS

10

MOSI

11

GND

GND

```
CE
9
SCK
13
MISO
12
Joystick
Arduino
Vcc
5V
GND
GND
GND
Output 1
```

A0

A1

Output 2

Figure 6: Transmitter unit when built from parts rather than the shield.

Receiving signals

Find the code in my repository or copy it below.

```
// Find details: https://tetraquarkbeta.netlify.app/post/wheelchair/wheelchair/
//A simple code to receive joystick x and y values with Arduino Uno and nrf24101
// and to convert the values to Voltages using PWM (2.2K resistor and 33uF capacitor as a lo
// note the CS and CE pin connections
// NRF Pin
              Arduino Pin
//
     Vcc
                 3.3V
                            DO NOT connect to 5V, it will damage the transmittet unit!
//
     CS
                 8
//
    MOSI
                 11
     GND
                 GND
//
     CE
                 7
     SCK
                 13
//
```

```
// Note that CE and CS pins can be changed, if needed.
#include <SPI.h>
#include <nRF24L01.h>
#include <RF24.h>
#define CE_PIN 7
#define CSN_PIN 8
const uint64_t pipe = 0xE8E8F0F0E1LL;
RF24 radio(CE_PIN, CSN_PIN);
int joystick[2]; // will store joystick doublet: first entry is the X value, second is the Y
int lout= 3; // Will light up an LED when signal is received-very useful for debugging
int yout= 5; //PWM output for X value
int xout= 6;//PWM output for Y value
float central_valuex = 511.0; // this should be 512 theoretically but it may deviate from i
float central_valuey = 502.0; // this should be 512 theoretically but it may deviate from i
/// Joystick values are 10 bit numbers ranging from 0-1023
/// We will map these numbers a range so that when converted to voltage we get Vmin and Vmax
 //Vmax=4V for this example. We also assume center voltage is 2.5. The voltage will range from
float Vmax=4.00;
float mindelta=10;// incoming joystick values may fluctuate a bit and more importantly as you
// joystick along one axis only it may move on the other axis a bit as well. We will put a ti
// minimum deviation to clean out unintentional movement
int debugmode=1; /// use this to turn serial commumication on and off
int joyx; //the number to send to the PWM output. Min value is dictated by Vmin, max is by Vm
int joyy;
void setup()
 pinMode(lout, OUTPUT);
     analogWrite(lout,0); ;
  Serial.begin(9600);
  delay(100);
  Serial.println("Nrf24L01 Receiver Starting");
  radio.begin();
  radio.openReadingPipe(1,pipe);
  radio.startListening();
```

```
}
void loop()
      if(radio.available())
             {
                             analogWrite(lout,255);
                   radio.read( joystick, sizeof(joystick) );
                   /// calculate joyx and joyy
                   if (abs(joystick[0]-central_valuex)<mindelta)</pre>
                    {joyx=128;}// if the joystickx did not deviate enough from mid point set output to 128
                   else{joyx=128+127*(joystick[0]-central_valuex)*((Vmax-2.5)/2.5)/(1023-central_valuex);
                   if (abs(joystick[1]-central_valuey)<mindelta)</pre>
                    {joyy=128;}// if the joysticky did not deviate enough from mid point set output to 128
                                 else{joyy=128+127*(joystick[1]-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2.5)/2.5)/(1023-central_valuey)*((Vmax-2
                   analogWrite(xout, joyx); analogWrite(yout, joyy); // send the final results to the port
                   if (debugmode==1) {
                    //Serial.print("Received: X="); Serial.print(joystick[0]); Serial.print("; Y="); Serial.
                   Serial.print("; Converted to: Xpwm="); Serial.print(joyx); Serial.print("; Ypwm="); Serial.print("; Ypwm="); Serial.print(");
             }
             else {delay(300);Serial.println("No radio"); analogWrite(lout,0); ;analogWrite(yout, 1)
```

As we are going to convert the received signals to analog, the receiver requires a bit of soldering work. The connections are very simple and they are described in the code.

Figure 7: The finished receiver unit. The resistors and capacitors are used to convert PWM to DC.

The conversion of PWM to DC is done by the simple circuit below.

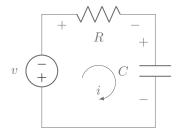


Figure 8: Converting Pulse Width Modulated (PWM) signal to its DC value. The capacitor charges to the mean value of the PWM. For 255 this will be the half of the supply voltage, i.e., will yield 2.5V.

Putting it all together

In principle one can keep the wheelchair as is, at least the base of it. However, I wanted to have something a bit smaller, and I kept the controller unit, the joystick and the motors&wheels. I built an aluminum frame with a wooden platform and used a pair of relatively small batteries. I made it all modular so that I can easily remove the batteries, or the circuit for easier transportation. See below for the finished bot, which has become my cat's favorite spot. It is a 3-wheeler with a caster wheel at the back. I located all the heavy parts close to the front wheel axis to maximize traction. I also left a large space at the back for a laptop. I am planning to make this autonomous!

Figure 9: Connecting the receiver to the wheelchair parts. Cat or the ruler for scale! Note the cables coming out of the original joystick. The wheelchair controller board, which is hidden at the bottom of the platform, still thinks that the signal is coming from the joystick. But in reality, it is coming from the Arduino board!